
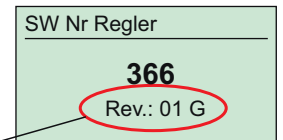
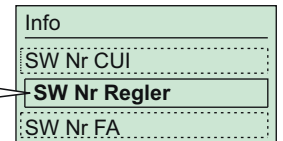
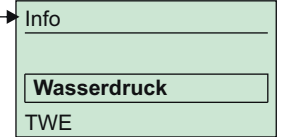
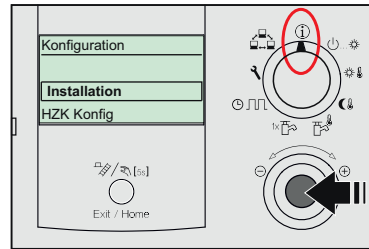


ZB HPSU compact 4

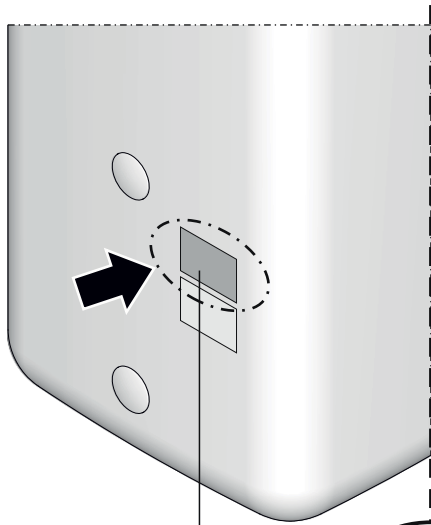

- >DE< SW Nr Regler
- >GB< SW Nr Controller
- >FR< SW Nr Controller
- >BE< SW Nr Controller
- >IT< SW Nr Controller
- >ES< SW Nr Controller
- >PT< SW Nr Controller

OR

?



Luft/Wasser-Wärmepumpe Typ: **HPSU compact xxxxx**

Inneneinheit passend zu Außengeräten:

	6 kW	8 kW
A-7/W35	5,29 kW/2,85	5,53 kW/2,78
A-2/W35	4,56 kW/3,68	5,51 kW/3,54
A-10/W35	6,25 kW/5,18	7,8 kW/4,9

Nenn-Heizleistung / COP

Leergewicht: 114 kg
Gesamtgewicht: 614 kg

Herstell-Nr.: 60314153200300234
model: 141532
serial: 0300234

003 03

ROTEX

ROTEX HPSU compact

ROTEX HPSU compact 304
HPSU compact 308
HPSU compact 508
HPSU compact 516

008.14 145 XX

4

HPSU compact
RbCon BM1 RbCon DT1


Bild 4-24

4.4.11

4.4.12

22 FA ROTEX HPSU compact 4



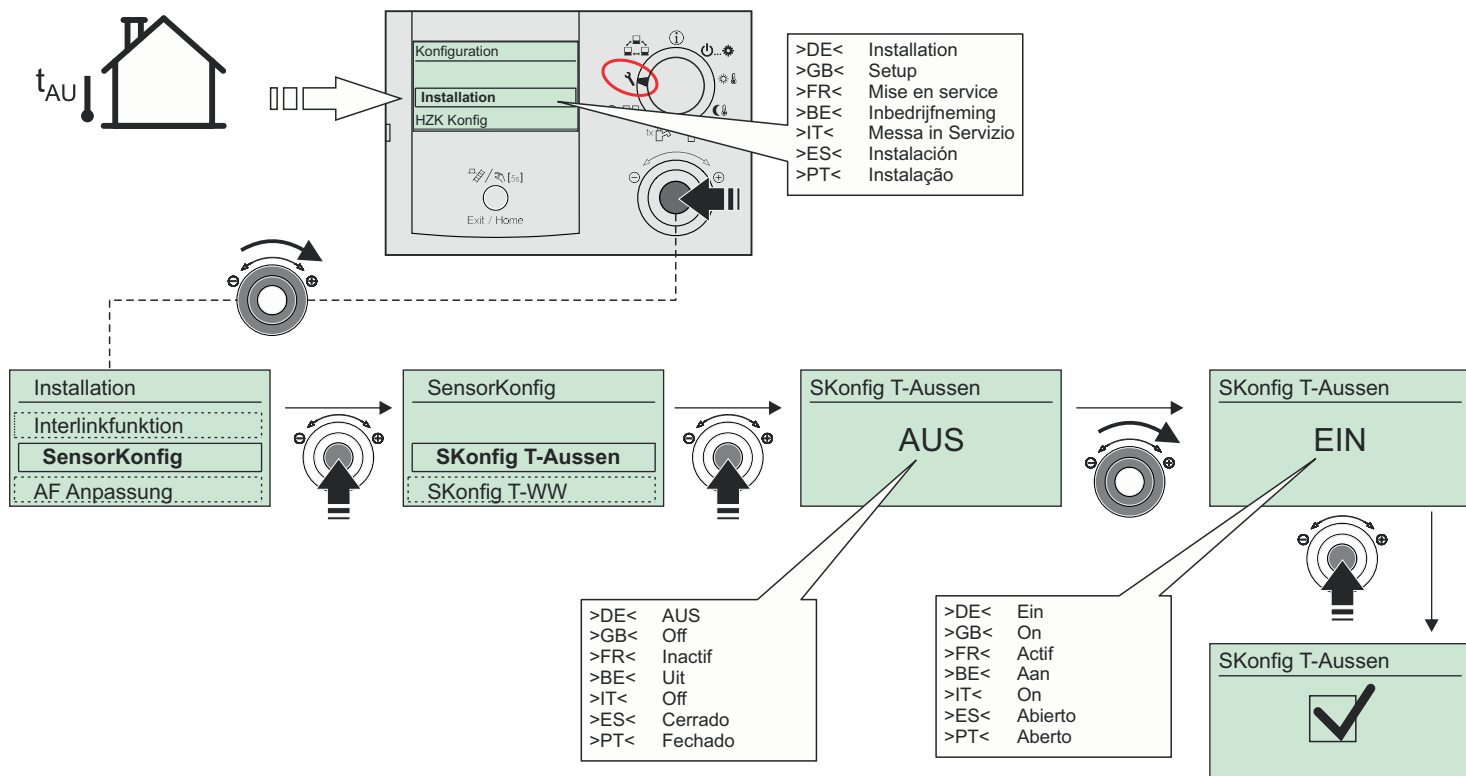

>DE<

Nach Anschluss des Außentemperaturfühlers RoCon OT1 an der Regelung RoCon HP der HPSU compact, muss der Parameter [SKonfig T-Aussen] auf "Ein" gestellt werden.

>GB<

After connecting the exterior temperature sensor RoCon OT1 to the regulator RoCon HP of the HPSU compact, the parameter [Outside Config] must be set to "On".

>FR<

Après le raccordement de la sonde de température extérieure RoCon OT1 sur la régulation RoCon HP de la HPSU compact, le paramètre [Outside Config] doit être mis sur « Actif ».

>BE<

Na aansluiting van de buitentemperatuursensor RoCon OT1 op de regeling RoCon HP van de HPSU compact, moet de parameter [Outside Config] op "Aan" worden gezet.

>IT<

Dopo il collegamento della sonda di temperatura esterna RoCon OT1 alla centralina RoCon HP di HPSU compact, impostare il parametro [Outside Config] a "On".

>ES<

Después de la conexión del sensor de temperatura exterior RoCon OT1 a la regulación RoCon HP del HPSU compact, es necesario poner el parámetro [Outside Config] a "Abierto".

>CZ<

Po připojení čidla venkovní teploty RoCon OT1 na regulaci RoCon HP zařízení HPSU compact musí být parametr [Outside Config] nastaven na "On".

>HR<

Nakon priključivanja vanjskog temperaturnog osjetnika RoCon OT1 na regulaciji RoCon HP der HPSU compact parametar [Outside Config] potrebno je postaviti na "On".

>PT<

Após a ligação da sensor da temperatura exterior RoCon OT1 à regulação RoCon HP da HPSU compact, é necessário configurar o parâmetro [Outside Config] para "Aberto".

>Fi<

Ulkolämpötila-anturin RoCon OT1 liitännän jälkeen ohjaukkeskukseen RoCon HP laitteessa HPSU compact täytyy parametri [Outside Config] asettaa kohtaan "On".

>SK<

Po pripojení snímača vonkajšej teploty RoCon OT1 na regulácii RoCon HP HPSU compact, sa musí parameter [Outside Config] nastaviť na "On".

>GR<

Μετά τη σύνδεση του αισθητήρα εξωτερικής θερμοκρασίας RoCon OT1 στο σύστημα ρύθμισης RoCon HP του HPSU compact, η παράμετρος [Outside Config] πρέπει να ρυθμιστεί στο "On".

>Si<

Po priključitvi tipala zunanje temperature RoCon OT1 na regulator RoCon HP na HPSU compact je treba parameter [Outside Config] nastaviti na "On".

>PL<

Po podłączeniu czujnika temperatury zewnętrznej RoCon OT1 do regulatora RoCon HP urządzenia HPSU compact należy ustawić parametr [Outside Config] na „On”.